

# How to refill oil into compressors



1. Loosen drain screw for oil carefully



2. Turn out drain screw completely



3. Remove drain screw



4. Exhaust compressor completely, turn clutch therefore



5. Let the oil flow into a measuring jug to state quantity



6. Adjust oil quantity according to manufacturer's advise



7. Screw in again drain screw with seal



8. Tighten drain screw again



9. Turn clutch 5 times manually to dispose the oil all-over