
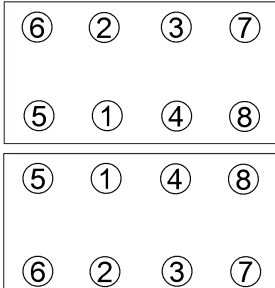


Anziehvorschrift für Zylinderkopf	548.906	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
passend für / suitable for adaptable à / adaptable a	Mercedes-Benz	

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



372.940
M 12x1,75x205



Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤	M12 10 Nm 60 Nm 90° 90° 90°	M8 20 Nm
---	------------------	--	-------------

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 84,1 / 1,2 mm links/left/gauche/izquierda/sin

Mot: OM 642.852, 858
300/350 CDI/BlueTEC

C218, W212, S212, X218

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

548.906