## FITTING INSTRUCTIONS


## **TOP MOUNTING POSITION**





Citröen ZX, Berlingo / Peugeot Partner

6-0

FI039EU












**Power-assisted steering** 



A B	TIGHTENING TORQUE			daN.m
	Α	Top stem nut		4.5
	В	Upper mounting bolts		2
	C	Lower mounting	Knuckle in H	5.5
			Knuckle hollow	4.5
CARA	D	Top nut of Stabilizer bracket		4



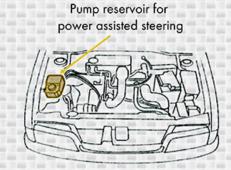

Identification of a vehicle with power assisted steering

